


2. Accelerator Pedal

A: REMOVAL

- 1) Disconnect the ground cable from the battery.
- 2) Disconnect the connector.
- 3) Remove the nut securing accelerator pedal assembly.

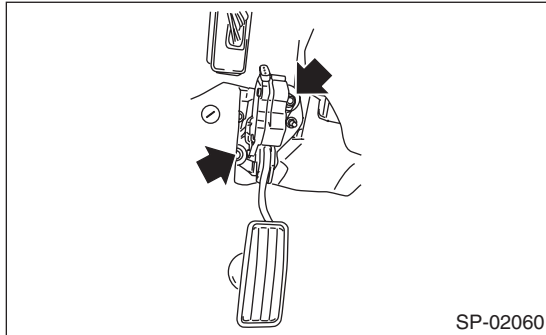

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

7.5 N·m (0.76 kgf-m, 5.5 ft-lb)

C: DISASSEMBLY

NOTE:

The accelerator pedal cannot be disassembled.

Accelerator Pedal

SPEED CONTROL SYSTEMS

IGNITION

IG(H6DO)

| | Page |
|------------------------------|------|
| 1. General Description | 2 |
| 2. Spark Plug | 4 |
| 3. Ignition Coil | 7 |

